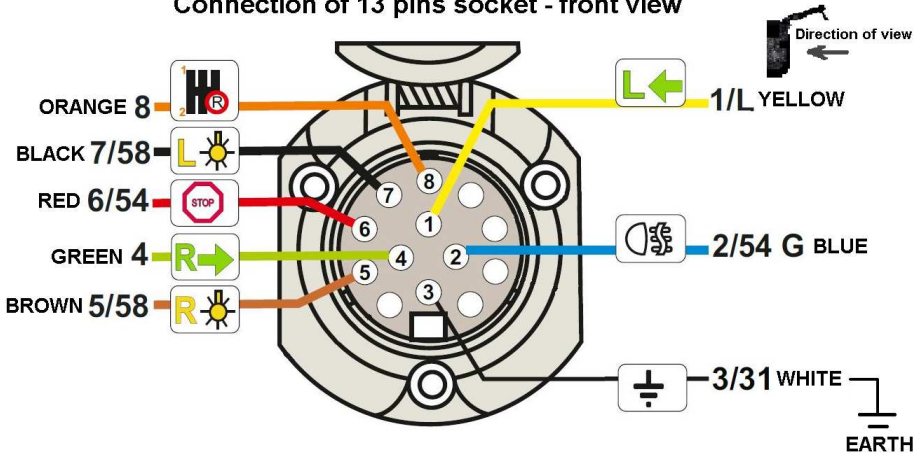


Standard universal towbar wiring kit, 13 pins (7 + reversing lamp)**- intended for cases when towbar is used for bicycle carrier****WARNINGS!**

Normal rules of competency apply to anyone fitting this wiring kit to a vehicle – person who did not complete course at specialized supplier of wiring kit should not install the kit. Wiring kit does not have own fusing. Wiring kit is **NOT** suitable for vehicles with CAN BUS, Data system FULL CAN, Check-Control systems.

Installation instructions

1. Check connection of 13 pins socket and fasten socket to a holder on a towbar.
2. In line with schema below connect wires of towing vehicle powering rear road lamps bulbs with socket wires – use scotchlocks – connect white wire from socket (3/31) on a towing vehicle chassis (earth).
3. Make a test of correctness of connection by test device.
4. Fasten wire harnesses as necessary using attached tie-wraps (zip ties).

Connection of 13 pins socket - front view

1	Yellow	Left indicator lamp
2	Blue	Fog lamp
3	White	Earth
4	Green	Right indicator lamp
5	Brown	Right tail lamp
6	Red	Brake lamp
7	Black	Left tail lamp
8	Orange	Reversing lamp

Štandardná univerzálna elektroinštalácia k ťažnému zariadeniu, 13 pólová (7 + cúvacie svetlo)


- určená pre prípady, keď je ťažné zariadenie používané pre nosič bicyklov
UPOZORNENIA!

Platia všeobecné pravidlá o kompetencii osôb montujúcich túto elektroinštaláciu do vozidiel – osoby, ktoré neabsolvovali školenie u špecializovaného dodávateľa elektroinštalácie by nemali elektroinštaláciu zapájať. Elektroinštalácia nemá vlastné istenie. Elektroinštalácia **NIE JE** vhodná pre ťažné vozidlá so systémami CAN BUS, Data systém FULL CAN, Check-Control.

Návod na montáž

1. Skontrolujte zapojenie 13 pólovej zásuvky a pripojte zásuvku k držiaku na ťažnom zariadení.
2. Podľa schémy nižšie spojte vodiče napájajúce žiarovky ťažného vozidla v zadných svetlách s vodičmi zásuvky – použite prerézavanie odbočky – pripojte biely vodič zo zásuvky (3/31) na kostru ťažného vozidla.
3. Otestujte správnosť zapojenia testovacím zariadením.
4. Upevnite zväzky vodičov podľa potreby priloženými páskami.

Zapojenie 13 pólovej zásuvky - pohľad spredu

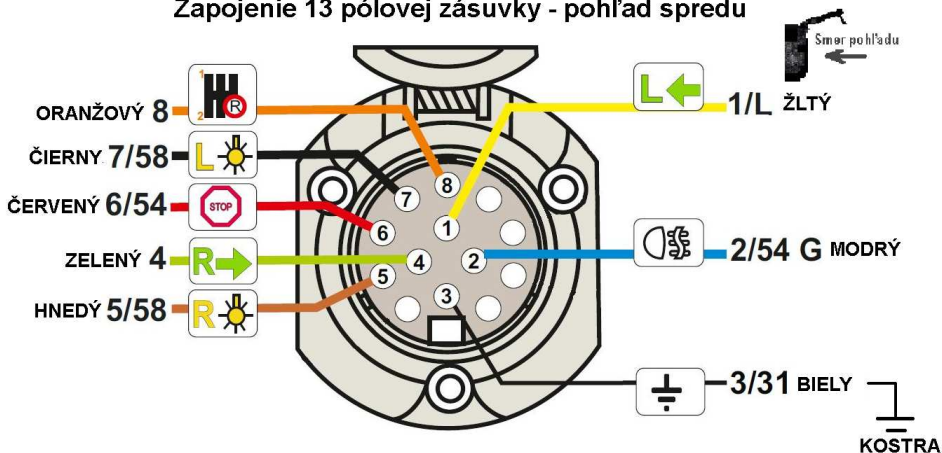

1	Žltý	Ľavé smerové svetlo
2	Modrý	Hmlové svetlo
3	Biely	Kostrá
4	Zelený	Pravé smerové svetlo
5	Hnedý	Pravé koncové svetlo
6	Červený	Brzdové svetlo
7	Čierny	Ľavé koncové svetlo
8	Oranžový	Cúvacie svetlo